MONTAGEANLEITUNG Türschild / Wandwegweiser

INSTALLATION MANUAL Door Sign / Directory

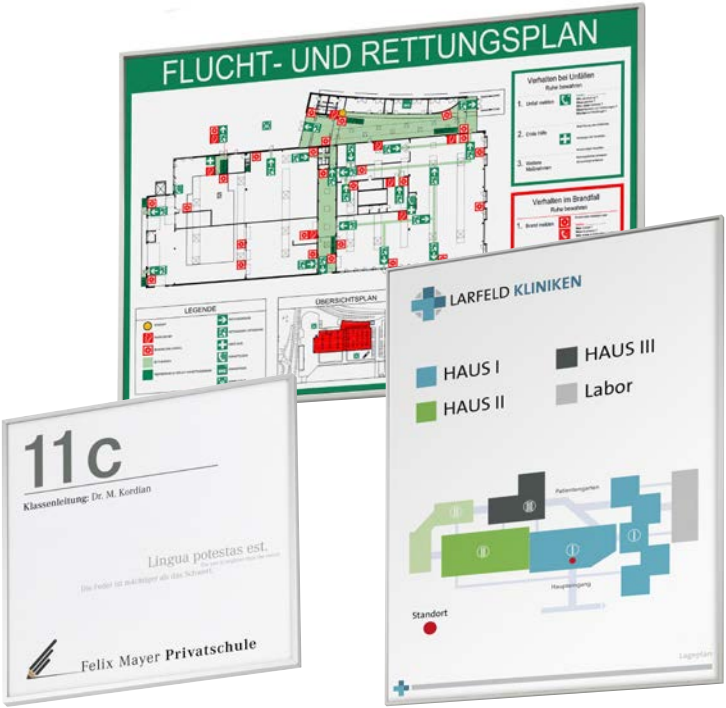

Format
Höhe x Breite

75,5 x 150,5 mm
105,5 x 105,5 mm
~DIN A6 hoch / quer
120,5 x 120,5 mm
150,5 x 150,5 mm
~DIN A5 hoch / quer
182,5 x 182,5 mm
299,5 x 150,5 mm
150,5 x 299,5 mm
212,5 x 212,5 mm
~DIN A4 hoch / quer
150,5 x 422,5 mm
299,5 x 299,5 mm
~DIN A3 hoch / quer
~DIN A2 hoch / quer
~DIN A1 hoch / quer
~DIN A0 hoch / quer

MADE IN GERMANY

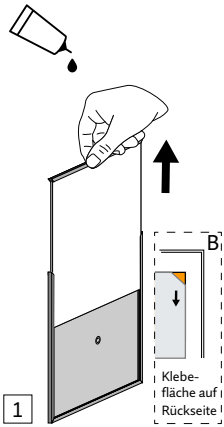

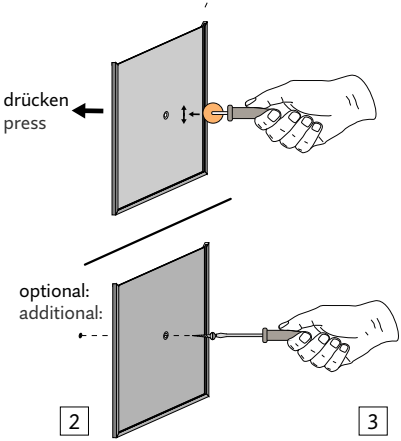

! Schutzfolie beidseitig abziehen.
Remove the protective film on both sides.

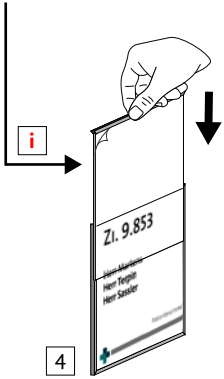

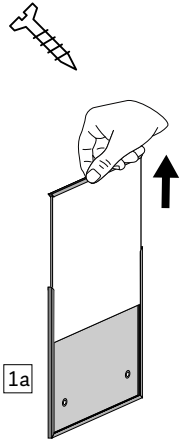

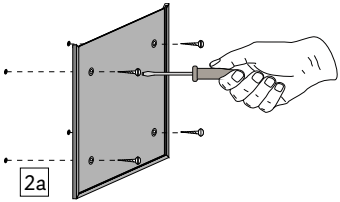

Öffnen der Entnahmesicherung (optional)
open locking device (additional)

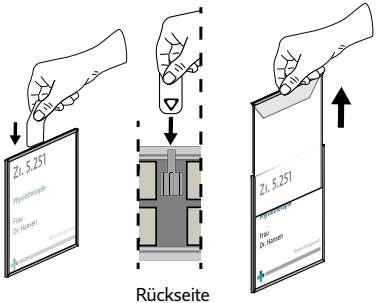

Rückseite
rear

Verklebehinweis:

Untergründe/Vorbereitung
Um eine optimale Haftung zu erzielen, müssen die zu verklebenden Untergründe sauber, trocken und fettfrei sein. Dies gilt auch für Hände und verwendete Werkzeuge. Zur Sicherheit Testverklebung durchführen. Diese muss auf den Originalflächen unter Originalbedingungen durchgeführt werden. Bei Bedarf zusätzliche Sicherung mittels Schraubbefestigung. (Schraube darf nur handfest angezogen werden)

Verklebung
Die optimale Verklebungstemperatur liegt zwischen 20 und 30°C in trockenen Räumen. Es darf nicht bei Temperaturen unter 10°C gearbeitet werden. Verklebeapplikationen sind nur für den Innenbereich.

Verarbeitung
Die Schutzfolie/Trennabdeckung muss vollständig entfernt/abgezogen werden (B). Die Werkstücke nach dem Fügen mit ausreichendem und gleichmäßigem Anpressdruck andrücken (ca. 20 N/cm²)
Für optimale Verklebungen muss eine passende Andruckrolle verwendet werden.

Hinweis Handhabung:

Nach Entfernung der Schutzfolien, von der Rückwand und der Abdeckung, schieben Sie die Acrylglasabdeckung bitte stets mit einer Papiereinlage in den Rahmen.

application tips:

Substrates / Preparation
To achieve optimum adhesion, the surfaces to be bonded must be clean, dry and free of grease. Antiadhesive surface substances such as e.g. Dust, mold release agents, greases or waxes must be removed before bonding. This also applies to hands and tools. If possible, ensure that the substrate is free from plasticizers. For safety, perform test bonding. This must be carried out on the original areas under original conditions. If required, additional protection by means of a screw. (Screw may only be tightened hand-tight)

Adhesion
The optimum bonding temperature is between 20 and 30°C in dry rooms. It must not be used at temperatures below 10°C. Gluing applications are for indoor use only.

Handling
The protective film / separating cover must be completely removed / removed (B). Press the workpieces with sufficient and even contact pressure after joining (about 20 N / cm²). For optimal gluing a suitable pinch roller must be used.

handling note:

After removing the protective film from the back panel and the cover, please always slide the acrylic glass cover into the frame with a paper insert.